





UTTERMOST

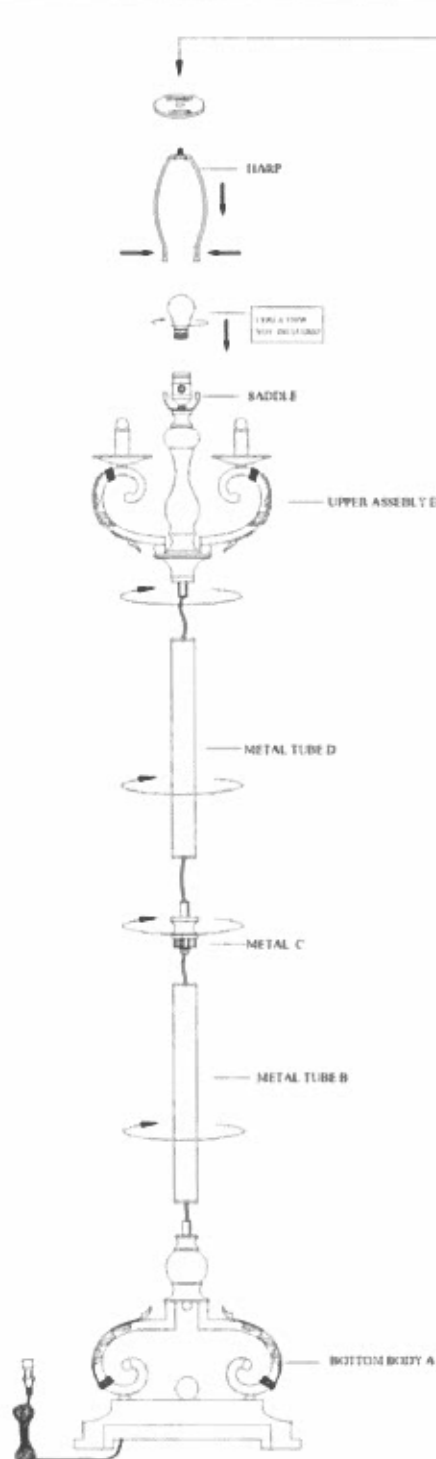

Warning: Can not pull off the wire from the base avoid the electric shocking.

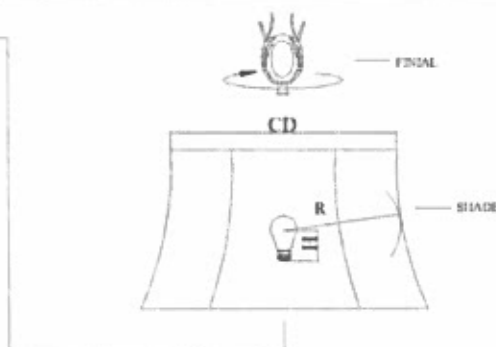

Assembly Instruction

STYLE NO.: 28871

1. Take the parts carefully out of the carton, and place it on a flat surface, make sure that the parts will not be damaged.
2. Screw the metal tube (B) to the bottom body (A).
3. Screw the metal tube (D) to the upper assembly (E).
4. Screw the metal (C) to the metal tube (D).
5. Slip the wire into the metal tube (B) completely, then screw the metal (C) assembly to the metal tube (B) assembly.
6. Attach the harp onto the saddle as drawing.
7. Install the bulb into the socket.
8. Place the finial disc and shade onto the harp, then screw the finial clockwise onto harp until shade is secure.

To clean, wipe with soft dry cloth.

CAUTION: IN ACCORDANCE WITH THE UL REGULATION, THE SHADE SHOULD BE OPEN TOP & OPEN BOTTOM AND "CD" IS BIGGER THAN OR EQUAL TO 4-1/2", "R" IS NOT SMALLER THAN 4-3/4" OR MAY CAUSE FIRE. "H" IS 3-1/4"

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com